

Instructions for opticians





Fauna is suitable for prescription lenses.


Please follow these instructions to avoid any damage.


Attention:
Fauna contains electronics.

Important information

 **Only heat up the marked grey parts.**
Up to 80 °C for acetate.
Up to 50 °C for lenses.

 **Don't adjust with pliers.**
Glasses can be damaged.

 **Be careful with ultra-sonic cleaning.**
Please remove temples beforehand.
Only the acetate front can be cleaned.


 **Fauna is water-resistant but not waterproof.**
Do not put it under running water.

Please follow these instructions to avoid any damage.

Adjustable
acetate front

Not adjustable

Adjustable
acetate tip

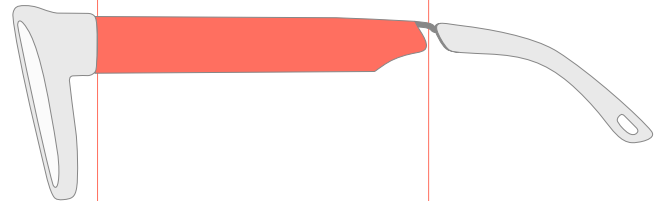

Heat OK
No electronics

No heat
Contains electronics

Heat OK
No electronics